USER MANUAL

Matrix Remover for Epson C7500



Please keep the original packaging in case you need to return the unit. If we receive the system in non-original packaging, the warranty may be void. An external power supply 100/240VAC - 2.5A at 24V - allows an electronic circuit to provide, through the tension arm, the adjustment of the rotation's speed and rotation's direction. A 4A fuse is used as protection.



WARNING:


Before starting a new job, always make sure the waste matrix from the previous job has been removed.

Do not attach the matrix from a different size label to an existing roll. This will cause an uneven wrap which will cause the material to walk.

Note on Media Environment:

50% humidity and 72 degrees Fahrenheit is the optimal conditions for both storage and use of label stock. Store label stock in protective plastic wrappings. Rewrap partially used stock. Do not store stock directly on concrete floors. Label stock should be conditioned in this environment for 72 hours prior to use. Failure to store media in these conditions may result in media tension problems. Too much humidity will cause labels to curl on the edges.

HOW TO INSTALL THE SECOND PLATE

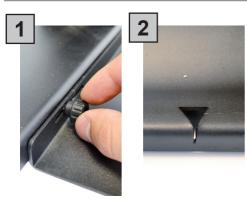

Use the two knobs to attach the matrix remover to the printer plate and align it thanks to the guides (pic 2).



Fix the printer on the printer plate.

HOW TO INSTALL PRESSING ROLLER



Unscrew the 10 screws on the matrix remover module.

The pressing roller facilitates the matrix removal from the die-cut roll.

Remove it from rewinder station (there are 4 knobs to unscrew).

How to install the roller:



Position the matrix remover roller onto the matrix remover module and secure it properly with the 10 screws.

RUN A JOB



Load a cardboard core onto the core holder to receive the waste.

Tighten using the tension knob.







Insert the empty cardboard core on the core holder to receive the new labels roll.

Load the outside disk making sure it adheres to the cardboard.

Tighten using the tension knob.

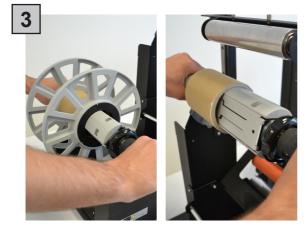

Insert the core holders onto their respective supports.

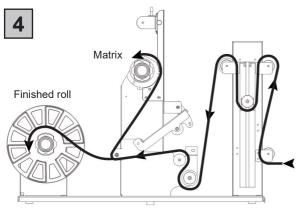

5

Paper path.

Attention: Align the paper to the three fixed guides on the rollers.



Pull the printed labels for about thirty centimeters.

At this point separate the matrix from liner.



Attach the matrix to the empty core on the wasted core.




Attach the finished media to the empty core on the rewinder core.



Close the clutch.

Attention: Recommended the first hole.

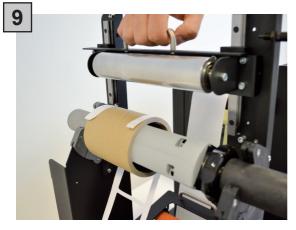

Release the pressing roller.

Plug in the unit and turn it on using the power switch located on the back.



ULTRASONIC SENSOR CALIBRATION




WARNING: Before proceeding with the ultrasonic sensor calibration, turn the unit "ON".


1. Raise up the tension arm up to the desired position (generally it is in the middle of the range). That point will determinate the tension arm working range from the bottom position. The longer your label will be, the lower tension arm position requires to be set.

2. Holding the tension arm idle at the desired position, using a paper clip, keep pushed the button into the small hole until the yellow led will have flashed 3 times.

3. The ultrasonic sensor has been calibrated and ready to be operative.

ULTRASONIC TENSION CONTROLLER

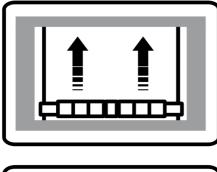

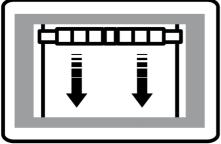





SMART SOLUTIONS FOR THE LABELING INDUSTRY Label rewinder, label unwinder, electronic label dispenser and more...





LABEL UNWINDER/REWINDER



SMALL LABEL UNWINDER/REWINDER



LABEL COUNTER



ROLL TO ROLL SYSTEM For label printers



ROLL TO ROLL SYSTEM For Epson printers



ROLL TO ROLL SYSTEM For VipColor VP series



ROLL TO ROLL SYSTEM FOR PRIMERA LX SERIES



MATRIX REMOVER AND SLITTER



LONGITUDINAL LABEL SLITTER



EASY LABEL DISPENSER



ELECTRONIC LABEL DISPENSER



SCORPID SERIES: DIGITAL LABEL FINISHING SYSTEMS



GEMINI: digital die cutter for sheets



VIRGO: desktop digital finishing system



MDTORIZED CORE HOLDER Unwinder/rewinder

- FOR MORE INFO CONTACT YOUR RESELLER -